





显示代码表																
代码	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	
显示	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	
代码	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	
显示	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	
代码	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	
显示	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	
代码	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	
显示	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	
代码	M	M1	M2	M3	显示	B1	B2	B3	B4	B5	B6	B7	B8	B9	B	G
86	87	88	89	代码	75	76	77	78	79	80	81	82	83	84	85	
H2	H3	3A	12A	显示	P	P1	P2	P3	R	R1	R2	R3	L	H	HI	
101	102	103	104	代码	90	91	92	93	94	95	96	97	98	99	100	
C2	C3	C4	C	显示	12B	13A	17A	17B	5A	G1	G2	G3	F		C1	
116	117	118	119	代码	105	106	107	108	109	110	111	112	113	114	115	
2C	3C	4C		显示	D1	D2	D3	D4	D	1F	2F	3F	4F	5F	1C	
131	132	133	134	代码	120	121	122	123	124	125	126	127	128	129	130	
UB	LG	UG	6A	显示	1B	2B	3B	4B	1A	2A	4A	CF	LB	E	A	
146	147	148	149	代码	135	136	137	138	139	140	141	142	143	144	145	
K	U	S	EG	显示	6B	7A	7B	5B	6C				SB	15A	13B	
161	162	163	164	代码	150	151	152	153	154	155	156	157	158	159	160	
MZ	SR	19A	Z	显示	KG										GF	
176	177	178	179	代码	165	166	167	168	169	170	171	172	173	174	175	
RF	1L	5L	1M	显示	HP	AB	PH	AA	L1	L2	L3	PB		AG	BE	
191	192	193	194	代码	180	181	182	183	184	185	186	187	188	189	190	191
A	16B	22A	22B	显示	3M	4M	B1A	B2A	B3A	B4A	PM	14A	14B	AS	15B	16A
5	207	208	209	代码	195	196	197	198	199	200	201	202	203	204	205	206
	54	55	56	显示	E1	E2	S1	S2	S3	E3	E4	49	50	51	52	53
	222	223	224	代码	210	211	212	213	214	215	216	217	218	219	220	221
	S4	S5	SS	显示	57	58	59	60	61	62	63	64	P4	P5	LD	1C
5	237	238	239	代码	225	226	227	228	229	230	231	232	233	234	235	236
8	PC	P6	P7	显示	HP	5C	9F	1F	1F	FF	3A	S6	S8	1P	1P	MF
	代码	240	241	242	243	244	245	246	247	248	249	250	251	252	253	254
	显示	PS	P9		P3A	P7A	P8A	P9A	AF							

---

--	--	--	--	--

---