

1. Introduction

BL2000-HZB-V1 COP & Parallel Landing Call Convert Board has the following main functions:

- (1). This board can be used for both COP and parallel Landing call input & response; Two mode is switched by DIP-Switch.
- (2). 7-segment floor display output and elevator status output;

2. BL2000-HZB-V1 Picture and Dimension

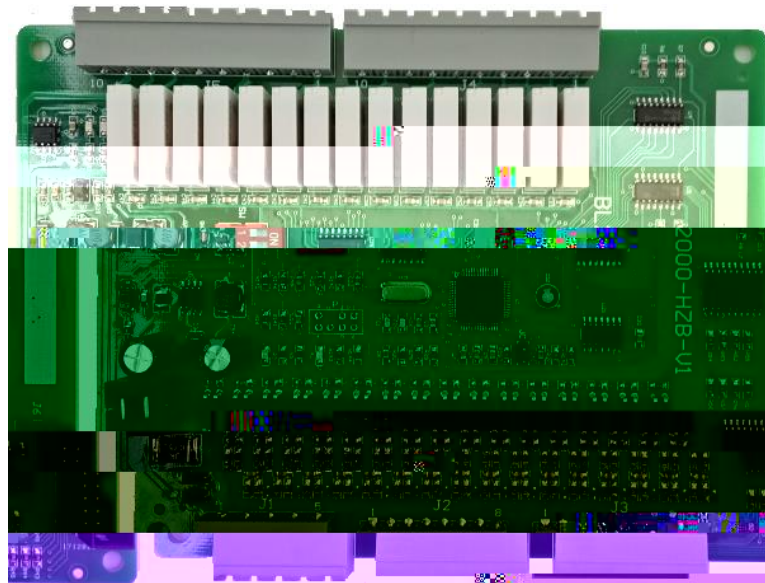


Figure 2.1 BL2000-HZB-V1 Front View

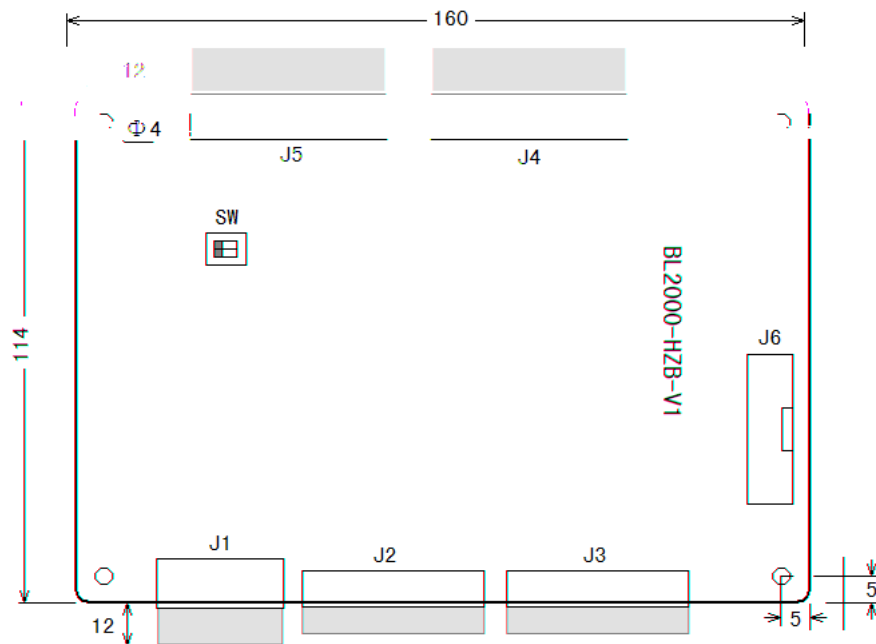


Figure 2.2 BL2000-HZB-V1 Dimension

3. Terminal Definition

Table 3.1 Terminal Definition and Specification

Terminal	Pin	Definition for COP Board	Definition for Convert Board	Specification	
				Type	Capacity
J1	J1-1	24V Input	24V Input	Power & Communication	
	J1-2	24V Ground	24V Ground		
	J1-3	CAN Bus H	CAN Bus H		
	J1-4	CAN Bus L	CAN Bus L		
	J1-5	24V Output	24V Output		
J2	J2-1	Inspection	1 st Up call of Single collective or 1 st Up call of Full collective	Opto-coupler Input	8mA
	J2-2	Inspection up	2 nd Down call of Single collective or 2 nd Down call of Full collective		
	J2-3	Inspection down	3 rd Down call of Single collective or 2 nd Up call of Full collective		
	J2-4	Attendant Input	4 th Down call of Single collective or 3 rd Down call of Full collective		
	J2-5	Attendant Up	5 th Down call of Single collective or 3 rd Up call of Full collective		
	J2-6	Attendant Down	6 th Down call of Single collective or 4 th Down call of Full collective		
	J2-7	Non-stop input	7 th Down call of Single collective or 4 th Up call of Full collective		
	J2-8	VIP input	8 th Down call of Single collective or 5 th Down call of Full collective		
J3	J3-1	Full load input	9 th Down call of Single collective or 5 th Up call of Full collective	OC Door Output	Current-limit resistor
	J3-2	Overload input	10 th Down call of Single collective or 6 th Down call of Full collective		
	J3-3	Door Open Limit	11 th Down call of Single collective or 6 th Up call of Full collective		
	J3-4	Door Close Limit	12 th Down call of Single collective or 7 th Down call of Full collective		
	J3-5	Light curtain	13 th Down call of Single collective or 7 th Up call of Full collective		
	J3-6	Open Door Button	14 th Down call of Single collective or 8 th Down call of Full collective		

Continue Table 3.1 Terminal Definition and Specification

Terminal	Pin	Definition	Usage	Specification		
				Type	Capacity	
J3	J3-7	Close Door Button	15 th Down call of Single collective or 8 th Up call of Full collective			
	J3-8	Door Open Delay Button	16 th Down call of Single collective or 9 th Down call of Full collective			
J4	J4-1	J4-2 J4-10 Com	J4-2 J4-10 Com	Relay Output	DC5A24V AC5A250V	
	J4-2					
	J4-3	-	-			
	J4-4	7-segment A	7-segment A			
	J4-5	7-segment B	7-segment B			
	J4-6	7-segment C	7-segment C			
	J4-7	7-segment D	7-segment D			
	J4-8	7-segment E	7-segment E			
	J4-9	7-segment F	7-segment F			
	J4-10	7-segment G	7-segment G			
J5	J5-1	J5-2,J5-3 Com	J5-2,J5-3 Com	Relay Output	DC5A24V AC5A250V	
	J5-2	Up arrow	Up arrow			
	J5-3	Down arrow	Down arrow	Relay Output	DC5A24V AC5A250V	
	J5-4	J5-5 J5-8Com	J5-5 J5-8Com			
	J5-5	Open Door Output	Inspection			
	J5-6	Close Door output	ARD Rescue output			
	J5-7	Lamp & Fan control	Fire			
	J5-8	Overload output	Overload output			
	J5-9	24V Output	24V Output			Power Output
	J5-10	24V Input Ground	24V Input Ground			
J6	J6-1,2	Car Call Connection (1~32)	Landing Call Extension Connection	Extension Connection		
	J6-3,4					
	J6-5,6					
	J6-7					
	J6-12					
	J6-13 J6-14					
SW	SW-1	OFF: Front COP Mode	OFF: Single collective	Function switch according to SW-2		
		ON: Rear COP Mode	ON: Full collective			
	SW-2	OFF: Convert Board Mode				
		ON: COP Board Mode				

Note:

1 While used as LOP convert board, if maximum floor less than 32 floors, landing call inputs of rear door will follow the last landing call input of front door. For example,

	Single collective	Full collective
J2-1	1 (front door)	1 (front door)
J2-2	2 (front door)	2 (front door)
J2-3	3 (front door)	2 (front door)
J2-4	1 rear door	3 (front door)
J2-5	2 rear door	1 rear door
J2-6	3 rear door	2 rear door
J2-7		2 rear door
J2-8		3 rear door

If maximum floor is more than 32 floors, all landing call inputs become front door call.

2. While used as Car Top board,

-
-

3. Display

-